




SL1 130DNA LED Light User Manual

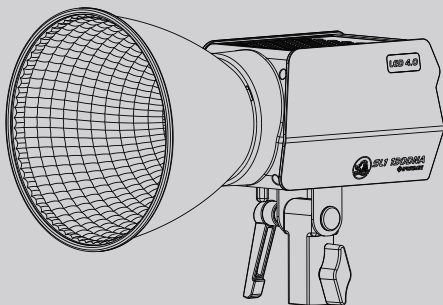

Thank you for purchasing this iFootage product. This manual provides important user information for the SL1 130DNA LED Light . Please read the manual carefully before operating the equipment and keep the manual safe for future reference.

The SL1 130DNA is a convenient and versatile LED light suitable for both video and photography production and features brightness adjustment, 5600K colour temperature, 8 different special effects, mobile device APP connectivity providing multiple settings including preset. The SL1 130DNA is compact enough to carry, cool enough to be hand held and can be attached to a light stand, magic arm or other support equipment. This flexible and compact light is perfect for both studio and location recording.

Contents

■ Features	1
■ Component Description	2
■ Operating Description	3
■ Mode Selection	4
■ Menu Bar	5
■ Power Management	6
■ Bluetooth Connectivity	7
■ APP Introduction	8
■ Accessory Installation	9
■ How to Use	10
■ Product Parameters	11
■ List of items	12
■ Notes	12
■ Maintenance	13


Features

1. The 130DNA light is compact, portable, has fully adjustable angles, provides simple onboard controls as well as App control and can be used hand held or on a stand or with any other suitable support equipment.
2. The 130DNA provides a natural spectrum light source, RA 98, high colour fidelity, realistic and saturated colour IES TM30-18 index, Rf 97 and Rg100.
3. The 130DNA offers 8 different special lighting effects designed to suite various scenarios.
4. There are 4 types of dimming curves to choose from.
5. Connecting to the App via Bluetooth will provide further functions such as preset, multi-lamp control and music mode.
6. Within preset and sequence dimming you can set the light source playback settings according to your personal preference and save different preset scenes for quick deployment and repeatable use.
7. Equipped with silent fans the 130DNA will automatically adjust fan speed to accommodate the temperature of the light.
8. To ensure the full potential life of the lights, they are equipped with a high temperature alert and an automatic heat protection function.

Precautions:

1. Keep dry. Do not expose the product to water, liquids, rain or moisture either whilst in use or when in storage. It is recommended that the product should not be handled using wet hands.
2. Do not disassemble or modify the product. Mishandling, including dropping the product, may result in permanent damage.
3. Please keep this product out of the reach of children and animals.
4. Do not use or store the light in the vicinity of harmful chemicals or combustible materials. Always read the warning labels prior to using the product.
5. Please use appropriate adapters for power supply and PD-140W adapters for Type-C supply ensuring the correct voltage.
6. The effectiveness of the lamp will be impaired if the heat sink is blocked or covered.

Component Description

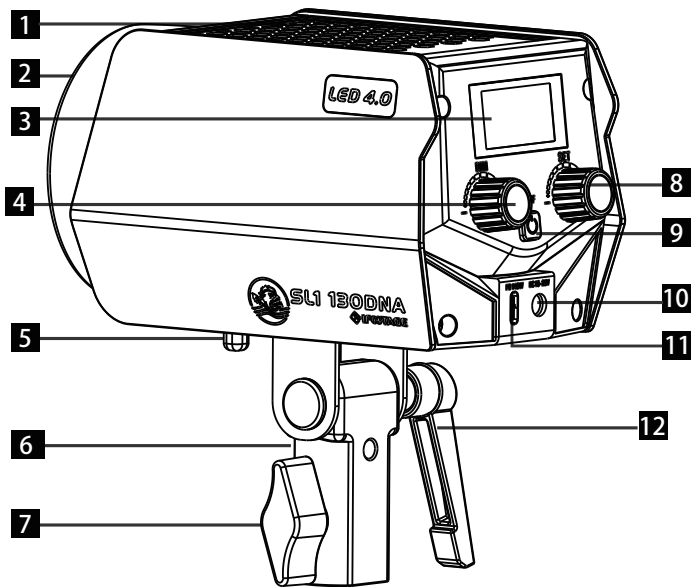

1 Heat sink

2 Light Head

3 Display

4 Dimmer Control

5 Reflector Release
Button

6 Adjustable Handle

7 Light Stand Locking
Control

8 SET Control

9 Power Button


10 DC Power Connection

11 Type-C Power Connection

12 Angle Locking Control

Operating Description

■ Controls Description

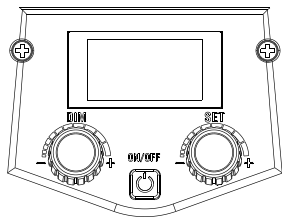

Dimmer Control:

 Rotate to adjust brightness.

 Press repeatedly to use preset brightness: 20%, 40%, 60%, 80% and 100%.

Pressing the Dimmer Control will exit silent fan mode.

ON/OFF Button:

 Tap: Power on

 Long press: Press and hold over 3 seconds to power off

 Short press: Temporarily turns light off/on

SET Control:


 Long press: return to the previous level menu.

 Press: go to the next level menu / switch between sub-menu options.

 Rotate: move up and down options / switch between modes.


■ Screen Description

Bluetooth Dimming Curve Fan Speed / Device ID Code Switch



Main Menu Bar

Sub-Menu Bar



Parameters


Mode Selection

Light Brightness Mode

In the main menu bar, press SET to select brightness, fixed at colour temperature 5600K±200.

 **DIM** Rotate the dimmer control to adjust brightness.


 **DIM** Press the DIM control and click the brightness adjustment control to quickly switch between brightness levels: 0%→20%→40%→60%→80%→100%.



Brightness Percentage


Studio Mode

This setting provides a 'failsafe' should the light have a power outage/failure. In Studio Mode the light will automatically re-set itself once power is restored (no need to use the power-on button). It will also restore all of your previous parameters and settings. To access Studio Mode simply select menu, press the SET key, enter the sub-menu and rotate through to locate Studio Mode.




Special Effect Mode

There are 8 special effects including: paparazzi, fireworks, lightening, strobe light, welding light, faulty bulb, pulsing and explosion. The corresponding parameters can be adjusted according to the effect being used.





Adjustable Parameter Values Special Effects Status

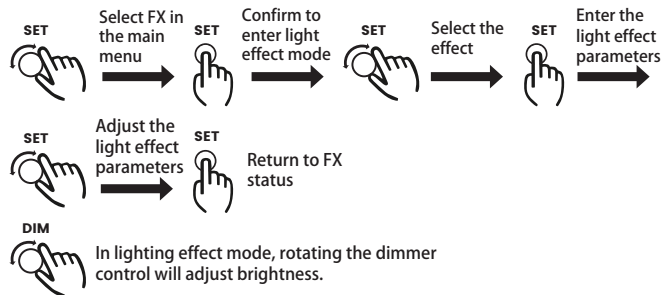

Menu Features

Fan Speed Adjustment

Fan speed can be adjusted to suit usage. There are 3 fan settings: 'Quiet', 'Auto' and 'Ultra Quiet'.

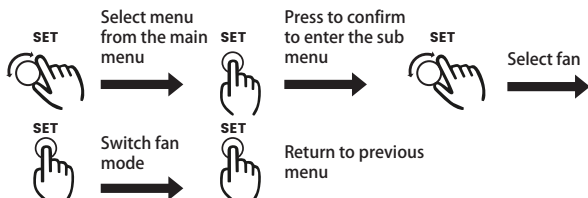



Whilst in silent mode, pressing the Dimmer Control will exit silent fan mode.

Note: Do not block or cover the heat sink and always ensure the light has adequate air circulation.

Dimming Curve


This is a means of pre-setting the dimming light function using one of four dimming curves: linear, exponential, logarithmic and S-curve. Each one provides an alternative type of dimming.

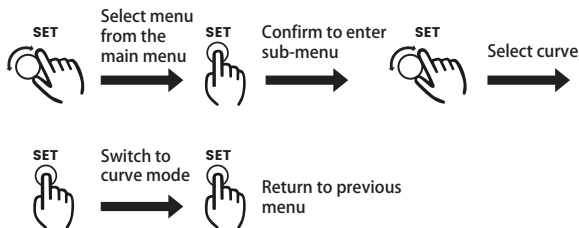

Menu Features

Language Settings

On the device screen, select Menu→press SET to enter sub-menu→select language by rotating SET→press SET to switch between Chinese and English.



Restore Factory Settings

On the device screen, select Menu→Press SET to enter sub-menu→select Restore Factory Settings by rotating SET→Press SET to confirm. Restoring factory settings will delete all data set by the user, so please use it carefully.




Power Management

Power supply

DC Power Port: DC15-28V

Type-C Port: PD3.1 28V=5A

Note: If using a power adapter which is less than 14.8V, the lamp power will be automatically adjusted to below 80%. To ensure normal operation of the lamp, it is recommended that the correct iFootage standard power supply adapter is used at all times - third-party adapters are not recommended.

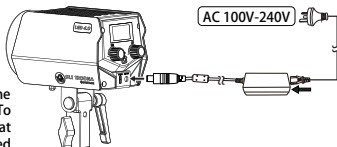

**To remove the power cable, please press the spring loaded cable release button and carefully pull out of housing. Do not force.*


Temporary Lamp Shutoff

Press the power button to turn the light off, and press the power button again to turn the light on. Temporary light shutoff is a low-power mode. When the product is not in use, please check to make sure the product is fully shut down.



High Temperature Alert


When the display shows the 'Overheating Protection' warning, the brightness will be reduced. It is recommended to turn the lamp off, and then continue to use after the overall temperature of the light has reduced. Long-term use of this product in high temperature conditions will affect the life of the device.

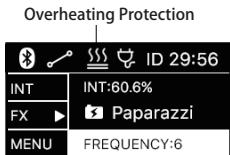

Bluetooth Connection

■ Bluetooth Connection and Reset

1. For Bluetooth connection: download the Lumin+ App to your mobile device (Smartphone or tablet). Once registered, open the Lumin App and create a new project. Open the project and search for devices, select the appropriate device using the device name or code to connect via Bluetooth. The light will blink three times to show a successful Bluetooth connection. Via the project device list, select to control single or multiple devices. The Bluetooth icon will appear on the status bar after which you can set the internal lighting values. If the APP shows Bluetooth connection failure, please check to see that your mobile device is Bluetooth enabled or reset Bluetooth on the product and try to reconnect.
2. Bluetooth Reset: On the device screen select Menu within the main menu bar and press SET to enter the sub-menu. Then select Bluetooth Reset by rotating the control and press SET to confirm.



Note:

1. Please reset the Bluetooth on the device first, otherwise the device will not be found.
2. The 130DNA and mobile device connection use Bluetooth BLE5.1 technology. Prior to opening the App to connect please ensure that Bluetooth has been enabled on your device. If using Android, you will need to enable Bluetooth on the APP also.
3. The Lumin+ App currently supports iOS 12.0 and above. It also supports mobile devices with Android 8.0 and above.
4. After connecting the device to the Lumin+ App via Bluetooth please ensure that, when prompted to make a firmware update, the battery power for all devices is sufficient to support the duration of the update.

APP Introduction

■ APP Overview

The Lumin+ App has multi-light control, Preset and music mode. For additional modes please download the Lumin+ App or visit www.ifootagegear.com to access a detailed App user guide. To download the APP, please scan the QR code or search for Lumin+ App. For more information please visit www.ifootagegear.com

after registering you can operate the product using the APP, however should you change to another mobile device, the product will be reset via Bluetooth, after which you can use the APP connection.



APP QR Code



Official Website QR Code



■ Preset and Sequences

Within the Lumin+ APP, you can adjust the preset settings which can then be added to any sequence. By setting a flashing sequence layout, cycle mode, fade time, duration, etc. you can then switch between scenes and control and play the lighting effects wirelessly.

■ Multi-light Control

Within the App's project device list, you can choose to add multiple lights to a project. By setting preset on each light you can create a multiple light sequence.

■ Music Mode

Music mode has a variety of ambient colours that react and change according to the music.

■ Special Effects


The Lumin+ APP has 8 internal effects, and more parameters can be set in the APP according to your lighting needs.

Accessory Installation

The SL1 130DNA LED light comes with its own Mini Bowens adapter and can be used with other light accessories which accommodate a Mini Bowens adapter such as Fresnel attachment, 60cm softbox or beauty dish etc.


■ Reflector Installation

To attach the reflector, the three tabs must be aligned with the lamp head and then rotated to lock it in place.

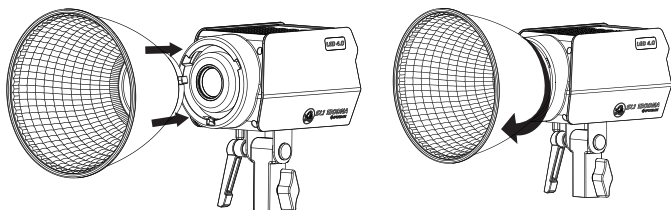

■ Reflector Removal


Push the reflector release on the lamp head and rotate the reflector anti-clockwise to remove.

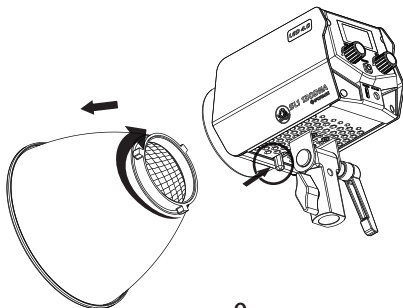

How to Use


■ Adjustable Spotlight Angle

The angle of the light can be easily adjusted by turning the angle handle anti-clockwise and then locking back in place by turning clockwise.

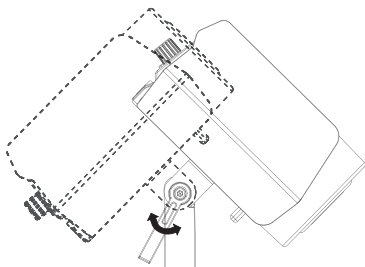

■ Usage

The 130DNA can be used hand held or attached to a light stand or other suitable support accessory, easy assembly and disassembly.

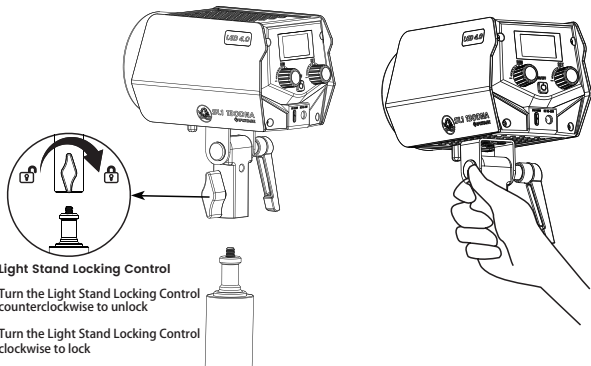

Product parameters

Product Name	LED Light
Model	SL1 130DNA
Adapter Voltage	Input AC 100V-240V~50/60Hz Output DC 20V
Light Body Working Voltage	DC 15-28V
Overall Power	160W
Light Output Power	130W
Materials	Aluminium alloy, stainless steel, PC
Bare Light Size	154 X 152 X 96 mm
Bare Light Net Weight	750g
Adapter Size	172.5 X 72.5 X35 mm
Adapter Net Weight	630g
Working Temperature	-15°C~45°C
SSI CIE-D55 *	84
IES TM-30 *	Rf97 Rg100
CQS *	97
CRI *	98
TLCI *	99
Colour Temperature*	5600K±200
Brightness Range	0%~100%
100% Illuminance *	≈4800LUX (main lamp, distance 1 meter)
100% Illuminance *	≈18200LUX (with reflector, distance 1 meter)
Control Method	Bluetooth APP control, manual button control
Wireless Frequency	2.4GHz
Bluetooth Transmission Distance	15 meters(no interference)
Display Type	Monochrome OLED

*Note: The above data is based on iFootage Lab tests and there may be some variation in values with data marked with an asterick *

List of items

SL1 130DNA Main Light Body, Reflector, 3m Power Cable, Power Adapter, Light Stand Adapter Screw, Warranty Card, User Manual, Certificate, Carry Case.

Notes

1. In order to avoid equipment failure, please do not expose this product to moisture or use in wet or rainy, sandy or dusty environments.
2. Do not disassemble or modify the product. Mishandling, including dropping the product, may result in permanent damage.
3. Keep this product and its parts out of the reach of children and animals.
4. Please ensure that the product is always free from moisture and is stored safely. Water and other liquids may contain minerals that can corrode the internal electronic circuits.
5. Avoid using or placing the product in high temperature environments, including direct strong, sunlight, as this may shorten the life of electronic parts, damage the battery or distort plastic parts or casings.
6. Avoid using the product in very low temperature environments as internal condensation or water particles may damage electronic circuitry as the temperature rises.
7. Avoid using or storing the product in dirty or dusty environments as this may damage components.
8. Avoid placing the product on or near hot surfaces or sources of heat such as lit cigarettes, naked flames or heating systems.
9. Do not disassemble the product by yourself. Unprofessional treatment will cause damage to the product.
10. Do not drop, knock or shake the product. Rough handling may damage the internal circuit board.
11. During use do not cover the light head with flammable materials.
12. To avoid burns, please do not handle the light if it is hot.

Maintenance

1. To prevent the accumulation of dust particles affecting the performance of the product, please carefully wipe the exterior of the product with a clean, soft, dry cloth at regular intervals.
2. The SL1 130DNA is covered by a 3-year warranty from the date of original purchase.
3. Product damage or failure to operate caused by inappropriate or irregular operation is not covered by the warranty.
4. Unauthorized repair or attempting repair will make the warranty void and any authorised repair will then be subject to charges.
5. If the product fails to function or is subjected to water or moisture please ensure it is professionally examined and repaired prior to using it.
6. Always use a clean, dry soft cloth to clean the lens on the product. Do not use harmful chemicals, cleaning agents or liquids to clean the product.
7. In the unlikely event that the product is found to be faulty please contact our Customer Service team who will be happy to assist you: cs@ifootagegear.com.

Statement

iFootage reserves the right to modify or rectify all hardware and software specifications without prior notice. In case of any discrepancy between the instruction manual and the actual product, please refer to the product itself. iFootage and its affiliates shall not be liable for any direct, indirect, punitive, incidental, special, consequential or property damage, or any harm to life resulting from the use or misuse of any iFootage product. The user assumes all risks associated with using this product, and this does not affect your legal rights.



Lumin+
APP QR Code



Official Website
QR Code

To download the Lumin+ APP, please scan the QR code or visit our website. For more information on operation modes please visit our website www.ifootagegear.com

Manufacturer's Information



IFOOTAGE INTERNATIONAL (HK) LIMITED

UK Design & Made in China

Origin: China

Website: www.ifootagegear.com

